

Installation & Reference Guide for Installers

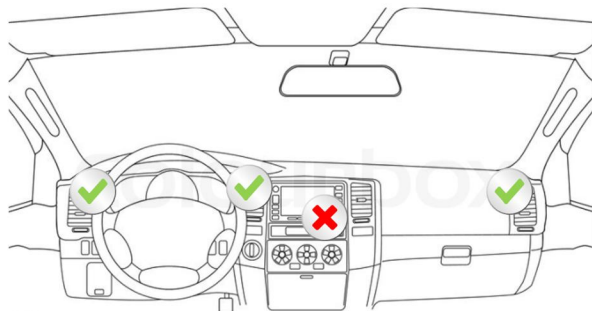
Procedure



1. Perform a vehicle check before starting installation.
2. Confirm vehicles and labels (i.e. "#001" [or] "Digger").



Installation Instructions

- **Mounting:** Mount the device with the label up, with best view of the sky from *under* the vehicle dash. Do not mount in the engine compartment or anywhere outside the cab of the vehicle. Do not mount directly on top of the AM/FM radio.



-  Good mounting locations.
-  Areas to avoid.




- **Wiring:** Run wiring to the power connection location. Secure all loose wiring with tape and/or tie straps. Power harness should be void of any moving objects, such as the parking brake or steering wheel.

1. Remove existing port, and install Y-Adapter
2. It is recommended to **Start vehicle 1st,** then plug in device

Harness Options



L.E.D. Status

-  Device Status [Good: slow blinking]
-  Device Status [Ignition: fast blinking]
-  Error Status [(2) cellular | (3) GPS]

Device Testing & APP Usage

1. Open the Temeda APP
2. Assign the Device to the Asset and fill in all Asset Details and Save to Create the Asset.

Technical support can be reached at 844-4-TEMEDA (+1-844-483-6332).

Disclaimer: All information is provided as a resource for the installer. Any installer and/or user of this document assume s the entire risk as to the accuracy and use of this information contained. Please verify all wire colors, diagrams, and documentation before applying any information. Always use a digital multi-meter when testing wires/circuits. [R 02.23A]