

## Installation & Reference Guide for Installers


### Procedure

1. Perform a vehicle check before starting installation.
2. Confirm vehicles and labels (i.e. "#001" [or] "Digger").
3. Use the Temeda APP (a login is required)



### Installation Instructions

- **Mounting:** Mount the device with the Suntech label up, with best view of the sky from under the vehicle's dash. Do not mount in the engine compartment. This device can be mounted on the outside of heavy equipment, using caution, and must be secured well. Do not mount directly on top of the AM/FM radio

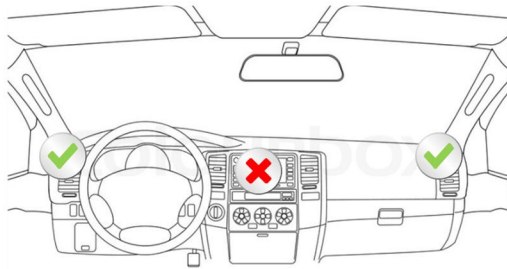

### L.E.D. Status

<b>BLU</b>	LTE Status   Good: (1x), slow blinking LTE Status   Error: (2-7x), pulsed blink
<b>RED</b>	GPS Status   Good: (1x) slow blinking GPS Status   No ACQ: (2x) pulsed blink

- **Wiring:** Run wiring to the power connection locations. Secure all loose wiring with tape and/or tie straps. The power harness should be void of any moving objects, such as the parking brake or steering wheel column. You must use the provided fuse extension harness. *Always connect ground first; T-Taps & Scotch locks are prohibited.*

<b>RED</b>	(POS) + Constant Power Source [12/24VDC]
<b>WHT</b>	(SWT) + Switched Power Source [12/24VDC]
<b>BLK</b>	(GND) Ground

### Device Testing & APP Usage

1. Open the Temeda APP.
2. Select from "unassigned devices" from the home screen
3. Use the Suntech serial number [ie. 08xxxxxxxx ]
4. Create Asset and fill out relevant Asset Information

Technical support can be reached at 855-544-6218 or.

Disclaimer: All information is provided as a resource for the installer. Any installer and/or user of this document assumes the entire risk as to the accuracy and use of this information contained. Please verify all wire colors, diagrams, and documentation before applying any information. Always use a digital multi-meter when testing wires/circuits. [R 03.23A]